



OPERATION

PRE-RIDE INSPECTION

For your safety, it is very important to take a few moments before each ride to walk around your motorcycle and check its condition. If you detect any problem, be sure you take care of it, or have it corrected by your dealer.

WARNING

Improperly maintaining this motorcycle or failing to correct a problem before riding can cause a crash in which you can be seriously hurt or killed.

Always perform a pre-ride inspection before every ride and correct any problems.

- Fuel level—Fill fuel tank when necessary (page 44).
- Throttle—Check for smooth opening and full closing in all steering positions.
- Engine oil level—Add engine oil if necessary (page 47). Check for leaks.
- Coolant level—Add coolant if required (page 43). Check for leaks.
- Brakes — Check operation;
Front and Rear: check brake fluid level and pads wear (page 37 – 39).
- Lights and horn—Check that lights, indicators and horn function properly.
- Engine stop switch—Check for proper function (page 58).
- Clutch—Check clutch fluid level.
- Side stand ignition cut-off system—Check for proper function (page 153).
- Wheels and tyres—Check condition, air pressure and adjust if necessary (page 48).

