


1 Move the fuel valve control lever to the "ON" position.

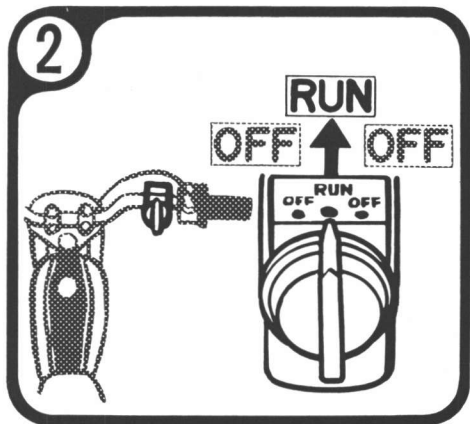

2 Move the ignition switch to the "RUN" position (red-dot).