

## Rear Suspension Inspection

Check the rear suspension periodically by careful visual examination. Note the following items.


1. Rear fork bushing—this can be checked by pushing hard against the side of the rear wheel while the motorcycle is on a support block and feeling for looseness in the fork bushings.
2. Check side stand spring for damage.
3. Check all suspension component attachment points for security of their respective fasteners.
4. Check for oil leaks in rear damper units.
5. Check the rear fork pivot nut and the two rear frame tightening bolts for looseness.

**NOTE:** If any of the above components appear damaged or worn, consult your HONDA dealer for further inspection.

## Air Cleaner Maintenance

To clean the air cleaner, proceed as follows:

1. Remove the left number plate.
2. Remove the three screws ① and remove the air cleaner case cover ②.

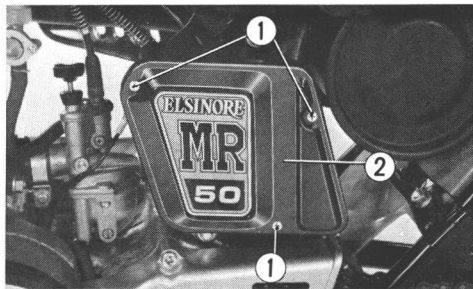

- ① Screws  
② Air cleaner case cover