


OPERATING INSTRUCTIONS

Main Switch

The main switch ① is located on the left side under the forward end of the fuel tank.

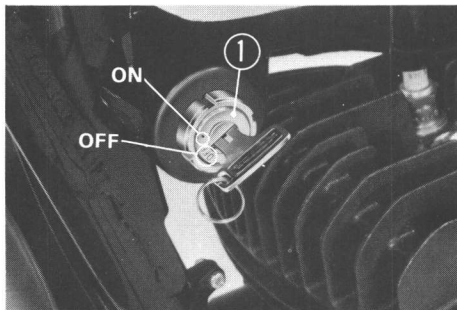

① Main switch

Key position	Function	Key Removal
OFF	All electric circuits are open: engine cannot be started.	Key can be removed.
ON (red dot)	Electric circuits are completed, lights will operate and engine can be started.	Key cannot be removed.