

MAINTENANCE OPERATIONS

Engine Oil Level

The oil tank is located to the left center of the motorcycle. Place the motorcycle in an upright position, and check the oil level through the inspection window ①. When it is below the top of the inspection window, fill the tank with oil (see engine oil recommendations, page 9).




① Inspection window

When the oil level is at the top of the inspection window, there is approximately 0.25 U.S. qt. (0.24 ℓ) of oil remaining in the tank. The total capacity of the oil tank is 1.4 U.S. qt. (1.3 ℓ).

NOTE :

- When filling the oil tank take care not to allow foreign materials to enter the tank.
- If any sign of air bubbles is noted in the oil pipes, immediately contact the nearest Honda Dealer.

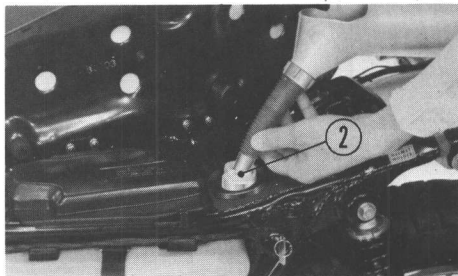

② Oil filler hole