


Transmission Oil Level

To check the oil level and add oil, proceed as follows:

1. Start the engine and warm it up for about three minutes.
2. Stop the engine. Place the motorcycle in an upright level position and remove the oil check bolt ①. The oil should flow out of the oil check bolt hole.

After checking, tighten the oil check bolt securely.

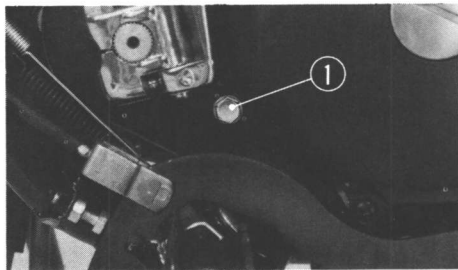


① Oil check bolt

3. Remove the oil filler cap ②, and check the oil level with the oil level gauge.

If it is below the lower mark on the gauge, add oil up to the upper mark through the the oil filler hole.

NOTE:

When checking the oil level, insert the level gauge into the oil filler hole, but do not screw it in.

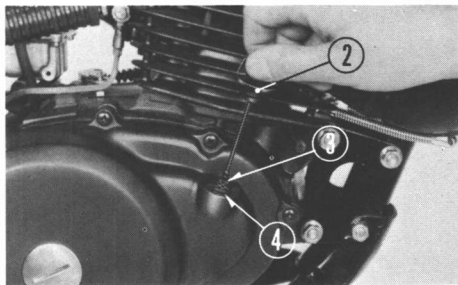

② Oil filler cap

③ Lower mark

④ Upper mark