


3. Adjust the spark plug gap ① to **0.024–0.028 in. (0.6–0.7 mm)**. The gap can be measured with a feeler gauge. The adjustment is made by bending the side (ground) electrode ②.

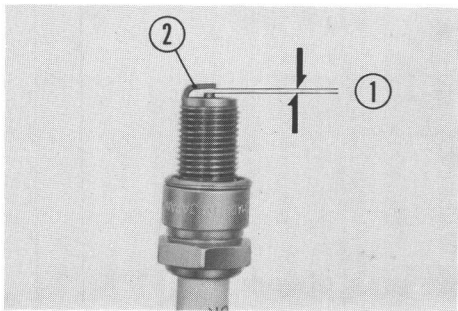

① Spark plug gap ② Side electrode

Before installing the spark plug, clean any oil or dirt from the spark plug seat in the cylinder head.

Install the spark plug by hand until finger tight. Then use the spark plug wrench to tighten the plug an additional 1/2 to 3/4 turn or until the sealing gasket is compressed.