

After adjusting the contact breaker point gap, tighten the point base locking screw, and recheck ignition timing.


5. When ignition timing is properly adjusted, rotate the generator rotor counterclockwise until the breaker points fully open, and check the gap with a clearance gauge. The gap should be **0.008–0.024 in. (0.2–0.6 mm)**.

If the maximum gap is not within these limits after ignition timing has been correctly adjusted, the contact breaker points should be replaced and ignition timing reset.

Air Cleaner Maintenance

The air cleaner element must be cleaned and oiled at least once every 3,000 miles. If your motorcycle is operated in dusty areas, more frequent servicing will be required. Your Honda dealer can help you to determine the correct service interval for your particular riding conditions.

1. Raise the seat.
2. Remove the tool kit case ①.
3. Remove the wing nut ②, and remove the air cleaner case cover ③.

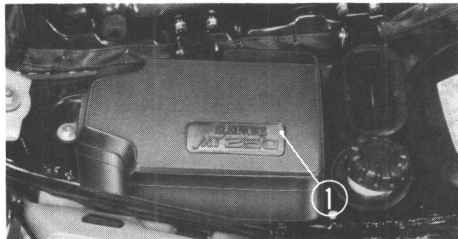

① Tool kit case