


Then loosen the lock nut ③ and turn the cable adjusting bolt ④ until the mark ⑤ on the pump body aligns with the matching mark ⑥ on the lever.

Excessive free play may result in a jammed pump, and insufficient free play may result in excessive oil consumption and spark plug fouling.

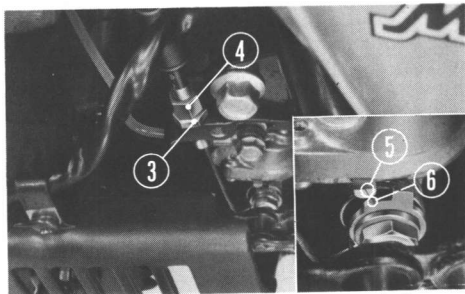


- ③ Lock nut ④ Cable adjusting bolt
⑤ Mark ⑥ Matching mark

Fuel Filter Maintenance

The fuel filter is incorporated in the fuel valve ① which is mounted on the bottom of the fuel tank at the left side. Accumulation of dirt in the filter will restrict the flow of the fuel and cause the carburetor to malfunction, therefore, the fuel filter should be serviced periodically.

1. Turn the fuel valve ① to the "STOP" position.

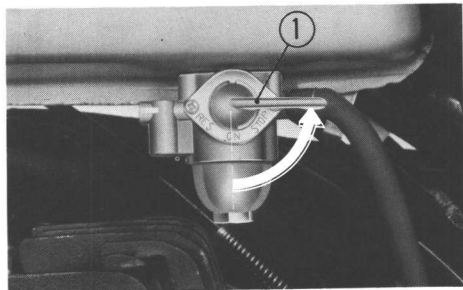

- ① Fuel valve