


5. Test ride to be sure the clutch operates properly, without slip or drag. If clutch operation is not satisfactory after adjustment, check the condition of the clutch plates and friction discs.

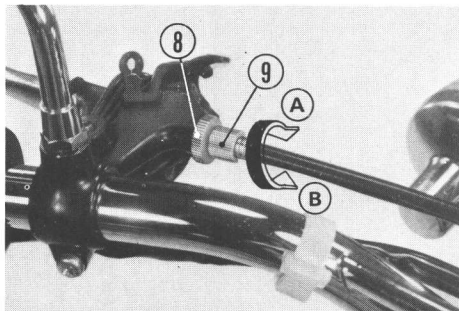

⑧ Lock nut ⑨ Upper adjuster

Drive Chain Maintenance

Proper tensioning and lubrication will help to extend the service life of the drive chain and ensure smooth power transmission to the rear wheel. Under severe usage, or when the motorcycle is ridden in unusually dusty areas, more frequent maintenance is necessary.

Tension Adjustment:

1. Place the motorcycle on a support block to raise the rear wheel off the ground. Shift the transmission into neutral.
2. Check vertical movement of the lower length of the drive chain at a point midway between the sprockets. Move the chain up and down with your fingers and observe the amount of slack. Drive chain tension should be adjusted to allow approximately $\frac{3}{4}$ " vertical movement at this point. Rotate the rear wheel and check drive