

- Turn the adjusting nut ② to position the stoplight switch at a point where the stoplight will come on when the brake pedal is depressed.  
Turn the adjusting nut in direction ① to advance switch timing or in direction ② to retard switch timing.


- reverse order of removal.
- Check headlight beam adjustment.

---

## Headlight Replacement

Replace the sealed beam unit as follows ;

- Remove the two headlight attaching screws and remove the headlight from the headlight case.
- Remove the two retaining lock pins ② and lock screws ③ from the headlight rim.
- Remove the beam adjusting screw ④.
- Remove the sealed beam unit.
- Install new sealed beam unit in the

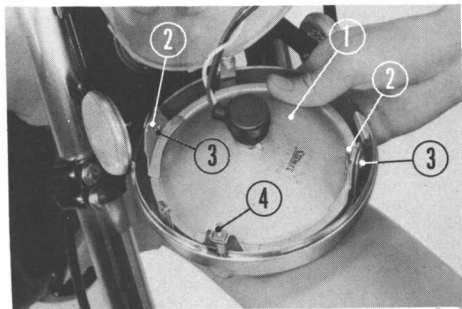

- ① Headlight      ② Lock pins  
③ Lock screws   ④ Beam adjusting screw