

Indicators



PGM-FI Malfunction Indicator Lamp (MIL)

This indicator comes on and stays on when there is a problem with your vehicle's engine system. If this happens, reduce speed and take your vehicle to a Honda dealer as soon as possible. The light should also come on for a few seconds when the ignition switch is turned to the ON (I) position.



Low Fuel Indicator

This indicator comes on and stays on when the remaining fuel is low. When the indicator comes on, the amount of fuel in the tank is approximately 1.5 US gal (5.7 ℓ). The light should also come on for a few seconds when the ignition switch is turned to the ON (I) position.