


Driver Controls

Shift Lever

Your vehicle is equipped with an automatic transmission. The shift lever, located to the right of the steering wheel, has three positions: drive (D), neutral (N), and reverse (R).

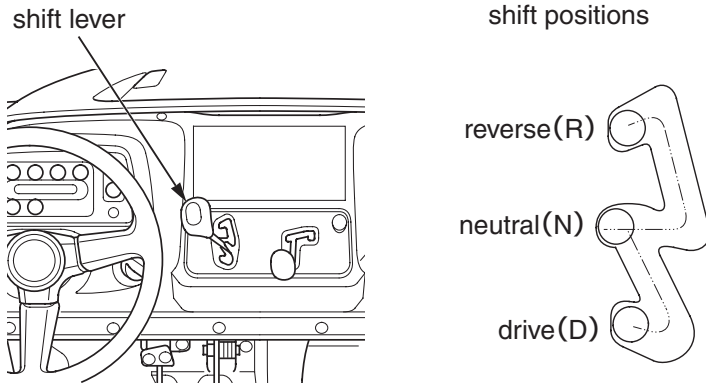

You should move the shift lever only when the vehicle is stopped with your foot on the brake pedal and with the engine idling. Have your vehicle checked by a dealer if you experience any shifting problems.

NOTICE

Do not attempt to shift the shift lever with engine speed above idle or while the vehicle is moving, as you may damage the transmission.