

# Doors

Your Honda MUV is equipped with doors to prevent branches, gravel, or other debris from getting inside the driver's compartment, and to keep the driver's and passenger's legs and feet inside the vehicle if your vehicle ever crashes or overturns. Be sure both doors are securely closed before driving your Honda MUV, and never remove a door.

If a door is damaged or does not close securely, see your Honda dealer for repair or replacement.


The left and right doors can be opened in the same manner.

## Open


1. Pull up the handle.
2. Open the door.

## Close

1. Close the door securely.
2. Make sure the door is closed securely.

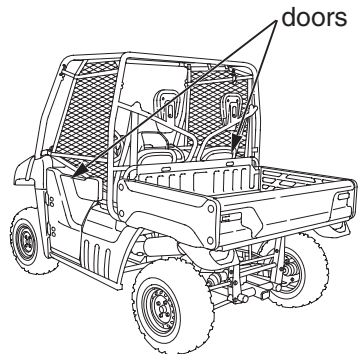

handle

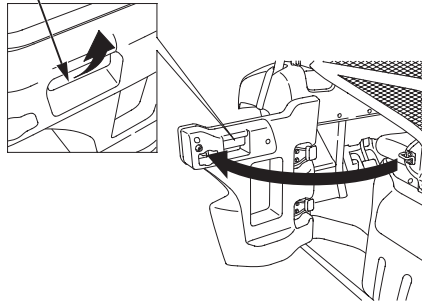

Do not drive the Honda MUV with the door open.