

# Doors

---

If the doors are shaky when closed, turn the door stopper counterclockwise to adjust the doors.

The left and right doors can be adjusted in the same manner.

## Adjust

1. Open the door (page 23).
2. Turn the door stopper counterclockwise.
3. Make sure the door is closed securely.

