

Is Your Vehicle Ready to Drive?

Tie-rod ends

The wheels need to be lifted off the ground to correctly check the tie-rod ends, so it cannot be done in the pre-drive inspection. To have the tie-rod ends properly inspected, see your Honda dealer.

Cargo

Be sure items in the cargo bed are within the cargo limit and are properly secured to prevent shifting (page 47, 48).

Seat Belts

Make sure both seat belts are in good condition and operate properly. The seat belts must move smoothly when pulled out, and retract on their own when released. The latch plates should click securely into the buckles and release when the release buttons are pushed firmly.

Remember to take care of any problem you find or have your Honda dealer correct it before you drive your Honda MUV.