

# Maintenance Schedule

Service the items listed at the indicated distance (or time, if given).

		Initial maintenance	Regular maintenance interval						Note	Refer to page
			6	12	18	24	30	36		
FREQUENCY (Whichever comes first)	× 100 mi	1	6	12	18	24	30	36		
	× 100 km	1.5	10	20	30	40	50	60		
	Hours	20	100	200	300	400	500	600		
	Month	1	12							
ITEMS										
	Lubricate all hinges, latches, and pivots									113
**	Inspect the following items:									—
	Suspension components									—
	Wheels									142
	Driveshaft boots			●				●		143
	Accelerator and brake pedals									118,131
	Brake light switch									133
	Exhaust system									125
	Battery terminal condition									146
*	Rotate tires		Recommend 1,800 miles (3,000 km) Depending on tire wear condition							141
	Check parking brake adjustment	●								—
**	Inspect the following items:									—
	Tie-rod ends							●		—
*	Steering gearbox and boots									—
*	Brake hoses and lines									—
*	MUV underbody								4	—
	Replace the following items:									—
	Front and rear differential oil		Every 2 years (regardless of mileage)							100,102
*	Engine coolant									106
*	Brake fluid									—

- \* Should be serviced by your Honda dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual (page 200).
- \*\* In the interest of safety, we recommend these items be serviced only by your Honda dealer.

Note 4 Check the underbody whenever the under guard has been hit.