


Seat Removal

Refer to *Safety Precautions* on page 69.

The seat must be removed for spark plug maintenance, to check the engine oil level, to add engine oil, to change the engine oil filter, and to access the tool kit. The right and left seats can be removed in the same manner.

Removal

1. Open the door (page 23) and side net (page 25).
2. Pull the seat latch at the front of the seat.
3. Slide the seat slightly forward and lift it.

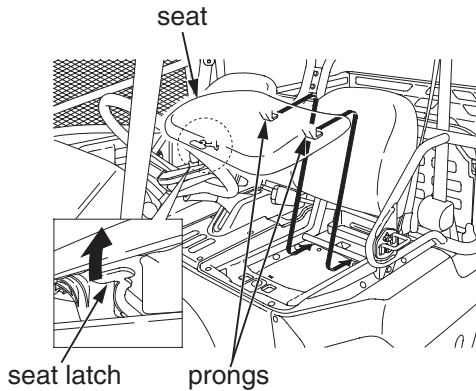

Installation

1. Insert the prongs into the frame.
2. Press down on the seat until it locks.
3. Close the side net and door.