


Lubrication

Lubricate the cargo bed strikers as shown in the following illustration. Lift the cargo bed (page 36).

UNDER CARGO BED RIGHT SIDE

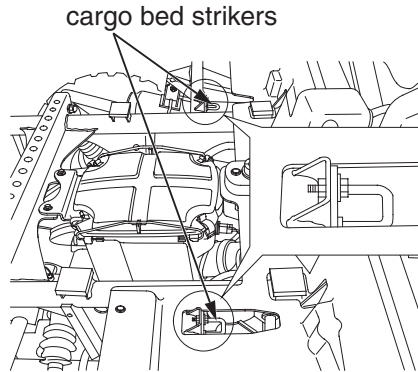

Lubricate the tailgate pivots as shown in the following illustration. Open the tailgate (page 35).

