

# Brakes

## Fluid Level Inspection

Refer to *Safety Precautions* on page 69.

### Brake Fluid Level

If your inspection indicates a low fluid level, have your Honda dealer add the recommended fluid.

The brake fluid level will drop as the brake pads wear.

Do not add or replace brake fluid, except in an emergency. If you do add fluid, have your Honda dealer check the system as soon as possible.


### NOTICE

*Brake fluid can damage plastic and painted surfaces. Handle with care.*

Check the fluid level on level ground.

1. Open the front hood (page 82).
2. Slide the brake fluid reservoir tank cap cover a little to visible MAX level mark. But never remove the brake fluid reservoir tank cap cover.

**UNDER FRONT HOOD  
LEFT FRONT**

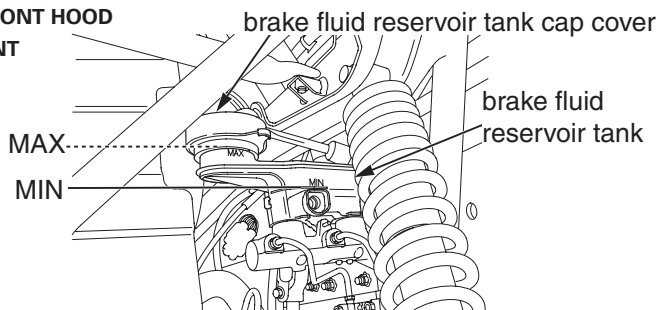

It should be between the MIN and MAX level marks. If the level is at or below the MIN level mark, check the brake pads for wear (page 130).

3. Return the brake fluid reservoir tank cap cover to its normal position.