## If Your Engine Quits or Won't Start

| SYMPTOM: Engine starts, but runs poorly.                 |   |
|--|---|
| POSSIBLE CAUSE   | WHAT TO DO                              |
| high coolant/oil   | Check the high coolant/oil              |
| temperature  | temperature indicator.                  |
|  | Refer to If the <i>High Coolant/Oil</i> |
|  | Temperature Indicator Lights,           |
|  | page 174.                               |
| runs erratically, misfires                               | See your Honda dealer.                  |
| blubbers (rich fuel<br>mixture)                          | See your Honda dealer.                  |
| sooty exhaust (rich fuel<br>mixture)                     | See your Honda dealer.                  |
| detonates or pings                                       | If applicable, switch to the            |
| under load   | recommended octane gasoline             |
|  | (page 85) or change your brand          |
|  | of gasoline. If the problem             |
|  | persists, see your Honda<br>dealer.     |
| afterfires (backfires)                                   | See your Honda dealer.                  |
| pre-ignition (runs on<br>after ignition switched<br>OFF) | See your Honda dealer.                  |

## 168 Taking Care of the Unexpected