


Coolant Temperature Gauge

Normal operating temperature is within the wide white red boxed band. If the needle enters the red zone (1) while riding, stop the engine and check the reserve tank coolant level. Read pages 31—32 and do not ride the motorcycle until the problem has been corrected.

CAUTION:

* *Exceeding maximum running temperature may cause serious engine damage.*

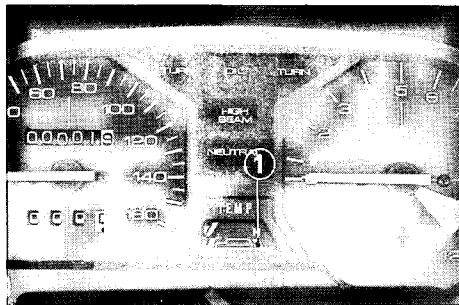

(1) Red zone