

To replace fuses (3) in the fuse box (4), remove the screws and the fuse box cover. Work the old fuse out of the clips, while moving the hook out of the way with a screwdriver, then lift it out with your fingers. Push a new fuse into the clips and install the fuse box cover.

 **WARNING**

- * ***Never use a fuse with a different rating from that specified. Serious damage to the electrical system or a fire may result, causing a dangerous loss of lights or engine power at night or in traffic.***
- * ***Do not pry the clips open to get a fuse out; you could bend them and cause poor contact with the new fuse. A loose fuse could cause damage to the electrical system and even start a fire.***