



(For Australian and New Zealand models)

–Check headlight, tail/stoplight, Turn Signal light and horn operation.

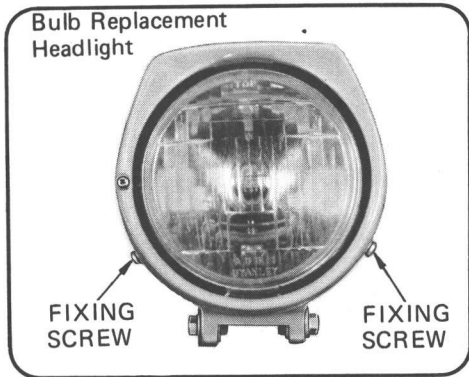

1. Remove the two headlight fixing screws and remove the headlight from the headlight case.

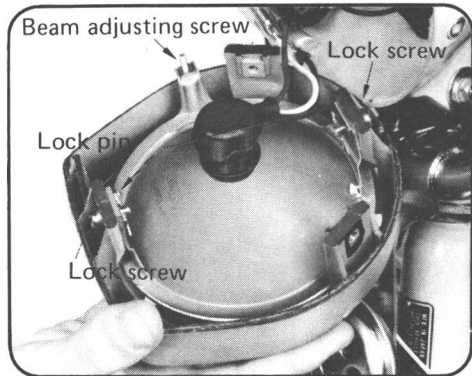

2. Remove the two retaining lock pins and screws from the headlight rim.
3. Remove the beam adjusting screw from the headlight rim.
4. Remove the sealed beam unit from the headlight rim.