



To start the engine, **CLOSE THE THROTTLE** and apply the rear brake. This will allow the spring to crank the engine for starting. Allow the engine to warm up before riding. Return the choke lever to open position as soon as the engine will run smoothly.

WARNING

- * The rear wheel will spin if not restrained by the brake or contact with the ground. Accidental contact with the spinning rear wheel could cause personal injury. Do not leave the motorcycle unattended while engine is running.
- * Exhaust contains poisonous carbon monoxide gas. Avoid inhalation of exhaust gases. Never run the engine in a closed garage or confined area.

NOTE

“BLIP” means to open and close the throttle rapidly.