



3. Pull out the cotter pin.

CAUTION

Always replace used cotter pins with new ones.

4. Remove the axle nut.

5. Pull the wheel toward you to remove.

When installing, adjust the rear brake to give proper free play (see page 15).

Torque for axle nut

4–5 kg-m (28.9–36.2 lbs.ft.)