

Engine Oil ► Changing Clutch Oil Filter (NC700SD only)

## Changing Clutch Oil Filter (NC700SD only)

Use a new Honda Genuine clutch oil filter or equivalent specified for your model.

**NOTICE**

Using the wrong clutch oil filter can result in serious damage to the transmission.

1. Follow the steps 1-7 of Changing Engine Oil & Filter. ▣ P. 72

2. Remove the clutch oil filter cover, clutch oil filter and spring by removing the clutch oil filter cover bolts.  
► Discard the oil and clutch oil filter at an approved recycling centre.

