


Do not touch the glass surface with your fingers. If you touch the bulb with your bare hands, clean it with a cloth moistened with alcohol.

Electrical Trouble ► Burned-out Light Bulb

Position Light Bulb

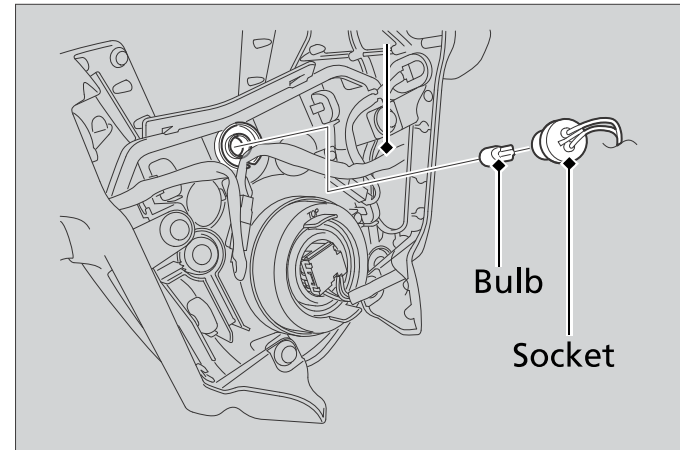

Troubleshooting

1. Remove the headlight assembly. ► P. 108
2. Pull off the socket without turning.
3. Pull out the bulb without turning.
4. Install a new bulb and parts in the reverse order of removal.

continued 109