


### Digital clock (1)

Indicates the hours and minutes. To change the hour proceed as follows:

1. Turn the main switch to ON.
2. Press the "H" button (2). To move the time forward keep the button pressed until the hour desired is displayed.
3. Press the "M" button (3). To move the time forward keep the button pressed. When "60" minutes are reached the display will turn to "00" without affecting the hour display.

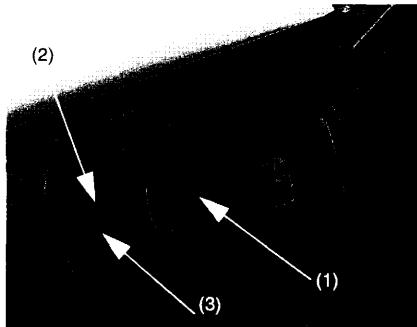

- (1) Digital clock
- (2) Hour button (H)
- (3) Minute button (M)