

FUEL

Fuel tank

The fuel tank is situated under the seat. Fuel tank capacity is 9 liters.

Unlock and open the seat with the ignition key. Turn the fuel cap (1) anti-clockwise until it clicks then lift it off. Fill the tank and then replace the cap taking care to tighten it firmly turning it clockwise. Make sure that the symbols on the cap and tank (2) are aligned.

Use petrol with an octane number of 91 or higher.

Use unleaded petrol because it produces a lower level of deposits in the engine and spark plugs, and extends the life of the exhaust system components.

CAUTION

- If "spark knock" or "pinking" occurs at a steady engine speed under normal load, change brands of petrol. If spark knock or pinking persists, consult your Honda dealer. Failure to do so is considered misuse, and damage caused by misuse is not covered by Honda's Limited Warranty.



- (1) Filler cap
(2) Symbols