

ENGINE OIL

Checking engine oil level

Check the engine oil level every day before riding your scooter.

The level must be between the upper (1) and lower (2) level marks on the dipstick (3).

1. Start the engine and let it idle for a few minutes.

2. Stop the engine and put the scooter on its a center stand on level ground.

3. After a few minutes, remove the oil filler cap/dipstick (3) wipe it clean, and reinsert the dipstick without screwing it in. Remove the dipstick. The oil level should be between the lower (1) and upper (2) level marks on the dipstick.

4. If required add the specified oil (see page 81) up to the upper level mark. Do not exceed the upper mark.

5. Replace the oil filler cap/dipstick. Check for oil leaks.

CAUTION

- **Running the engine with insufficient oil can cause serious damage.**



- (1) Level upper
- (2) Level lower
- (3) Dipstick