

The idle stop system is released when the idle stop mode switch is returned to the idling position. Setting the idle stop mode switch back in the idling stop position causes the system to resume its function.

The idle stop system will be released when the side stand is applied under the idle stop condition. It will resume its function when the side stand is stored.