


AIR CLEANER

(See "Maintenance precautions" on page 75)
The air cleaner must be serviced at regular intervals (page 70). Service more frequently when riding in unusually wet or dusty areas.

1. Remove the six screws (1) from the cover (2).
2. Remove the air cleaner cover and remove the air cleaner element (3).

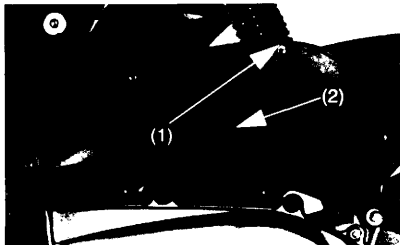

- (1) Screws
- (2) Cover air cleaner
- (3) Air cleaner cover

3. Use original Honda air cleaners or equivalent air cleaner specified for your model motorcycle. Using air cleaners different from those specified or non equivalent air cleaners, may cause premature engine wear or performance problems.
4. Install the removed part in the reverse order from which they were removed.

