

4. Replace the oil strainer screen, spring and drain plug.
5. Fill the crankcase with the recommended grade oil: approximately 1,1 liters.
6. Replace the filler cap.
7. Start the engine and let it run for around 2-3 minutes.
8. Stop the engine and check that the oil level is at the upper level mark on the dipstick with the scooter upright on firm level ground.

NOTE:

- Check there are no oil leaks.
- Always dispose of used engine oil in a way that will not damage the environment. Take it to your local service station in a sealed container. Do not throw it in the rubbish or pour it on the ground or down a drain.

CAUTION

- **Used engine oil may cause skin cancer if repeatedly left in contact with the skin for long periods. Although this is unlikely, unless you handle used oil on a daily basis, it is still advisable to wash your hands thoroughly with soap and water as soon as possible after handling used oil.**