


### Main fuses:

The main fuse (1) is on the left of the battery behind the center cover.

The specified fuse is:

30A

1. Remove the center cover (page 43).
2. Disconnect the wire connector (2) from the magnetic starter switch.
3. Remove the old fuse and install a new one.  
The spare fuse is kept in the tool bag (page 73).
4. Reconnect the connector and install the battery cover.

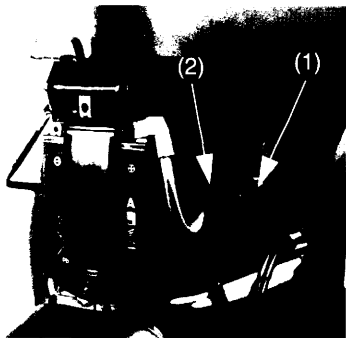

- (1) Main fuse  
(2) Connector