


Front turn signal bulb

1. Remove the indicator lamp glass (1).
2. Turn the connector by 90° counter clockwise and remove it.
3. Take out the bulb without turning it.
4. Install a new bulb following the removal procedure in reverse.

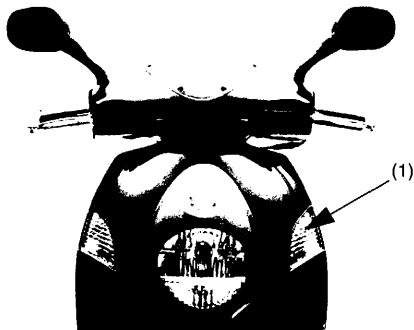

(1) Indicator lamp glass

Rear turn signal indicator light.

1. Remove the rear light (page 97).
2. Remove the turn signal cover.
3. Turn the left socket connector 90° counter-clockwise and the right one 90° clockwise and remove it.
4. Remove the bulb without turning it.
5. Fit a new bulb. Installation is in the reverse order of removal.

