
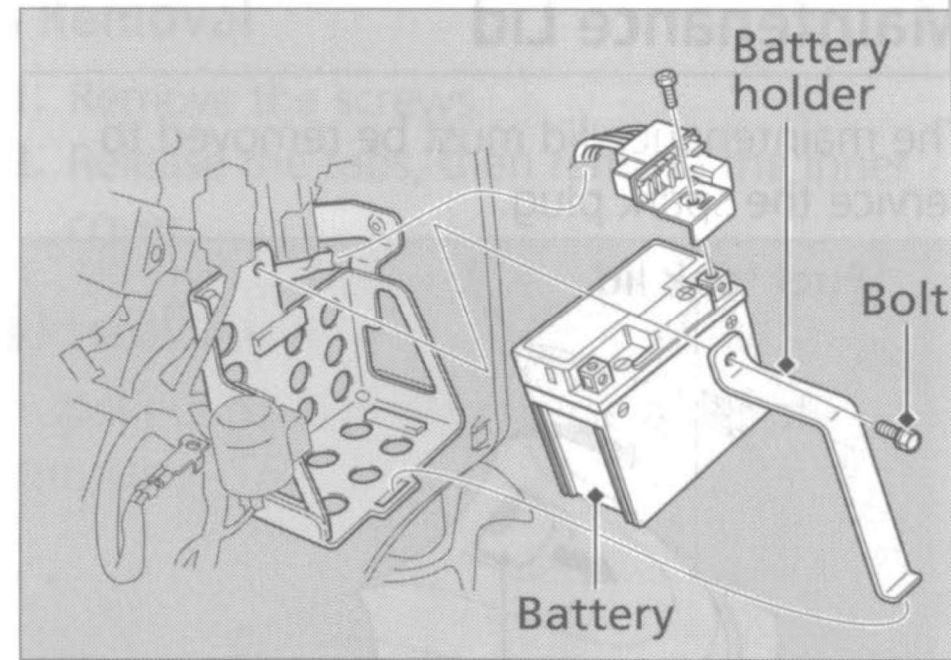


## Battery

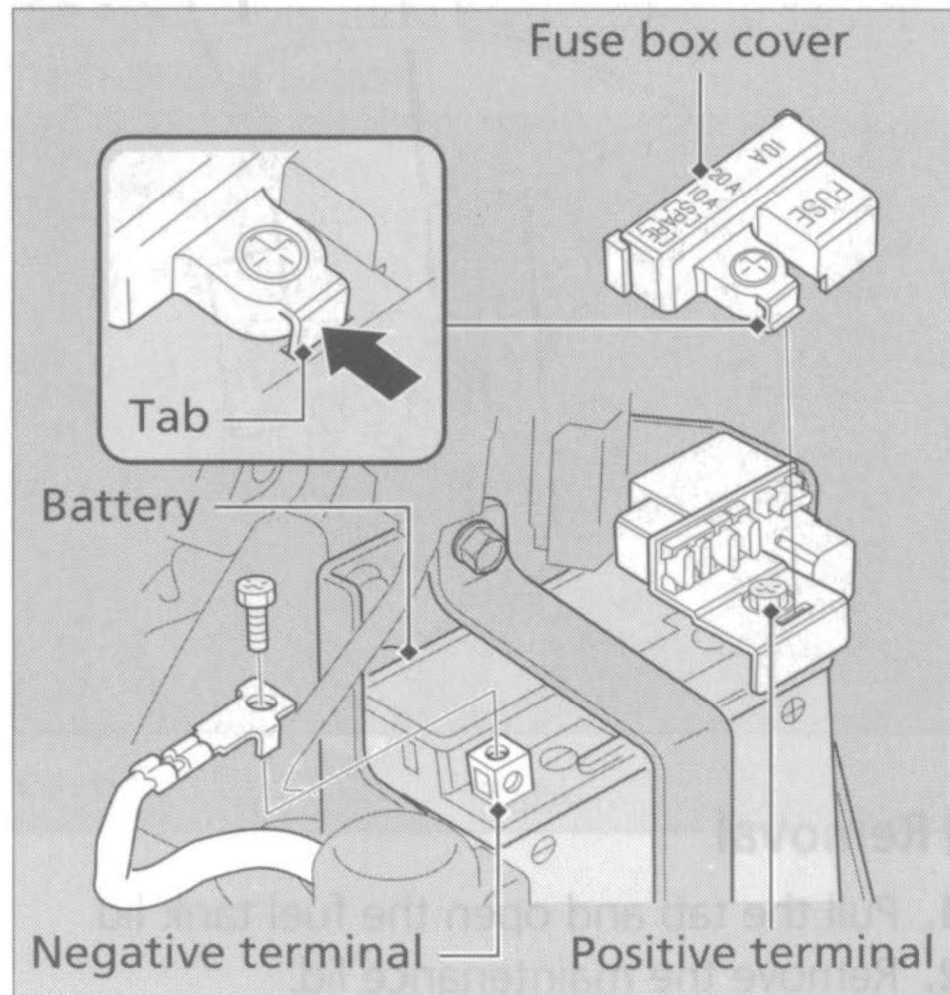

### Removal

Make sure the ignition switch is off.

1. Remove the inner cover. ► P. 52
2. Disconnect the negative  $\ominus$  terminal from the battery.
3. Release the tab, then remove the fuse box cover.
4. Disconnect the positive  $\oplus$  terminal from the battery.