

ITEM	FREQUENCY	WHICHEVER COMES FIRST ↓ →	ODOMETER READING [NOTE (2)]						PAGE	
			1,000 km (600 mi)	6,000 km (3,750 mi)	12,000 km (7,500 mi)	18,000 km (11,250 mi)	24,000 km (15,000 mi)	30,000 km (18,750 mi)		36,000 km (22,500 mi)
			EVERY			R				R
TRANSMISSION OIL					R			R	124	
DRIVE CHAIN			I, L EVERY 1,000 km (600 mi)						148	
BRAKE FLUID	2 YEARS *R		I	I	*R	I	I	*R	156	
BRAKE PAD WEAR			I	I	I	I	I	I	158	
BRAKE SYSTEM			I		I		I	I	156	
* BRAKE LIGHT SWITCH					I		I	I	192	
* HEADLIGHT AIM					I		I	I		
CLUTCH SYSTEM			I	I	I	I	I	I	142	
SIDÉ STAND					I		I	I	160	
* SUSPENSION					I		I	I	162	
** NUTS, BOLTS, FASTENERS			I		I		I	I		
** WHEELS					I		I	I		
** STEERING HEAD BEARING			I		I		I	I		

** IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY AN AUTHORIZED HONDA DEALER.

* SHOULD BE SERVICED BY AN AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND SERVICE DATA AND IS MECHANICALLY QUALIFIED. REFER TO THE OFFICIAL HONDA SHOP MANUAL.

NOTES: (1) Service more frequently when riding in dusty areas.

(2) For higher odometer reading, repeat at the frequency interval established here.