


(Ref.No.) Description	Function
(11) High beam indicator (blue)	Lights when the headlight is on high beam.
(12) PGM-FI malfunction indicator lamp (MIL) (amber)	Lights when there is any abnormality in the PGM-FI (Programmed Fuel Injection) system. Should also light for a few seconds and then go off when the ignition switch is turned ON and engine stop switch is at  (RUN). If the indicator comes on at any other time, reduce speed and take the motorcycle to a Honda dealer as soon as possible.
(13) Neutral indicator (green)	Lights when the transmission is in neutral.