


Low Oil Level/Pressure Indicator

The low oil level/pressure indicator (1) lights when engine oil level is less than specified capacity or engine oil pressure is below the operating range.

Should light when the ignition switch is ON and the engine is not running. Should go off when the engine starts, except for occasional flickering at or near idling speed when engine is warm.

When the engine oil gets lower than specified capacity and its pressure gets low, the shift indicator also changes to the blinking “-” icon (2) along with the indicator. When this happens, the transmission automatically shifts to neutral (neutral indicator does not light).

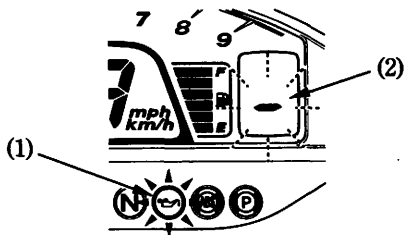

- (1) Low oil level/pressure indicator
- (2) “-” icon