



To switch the transmission into neutral:

Press and hold the N (neutral) side (1) of the N-D shift switch in each drive mode until the D mode indicator (2), S mode indicator (3) or shift indicator (4) disappears and the neutral indicator (5) turns on.

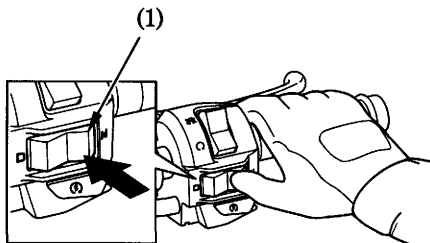

(1) N-D shift switch (N)

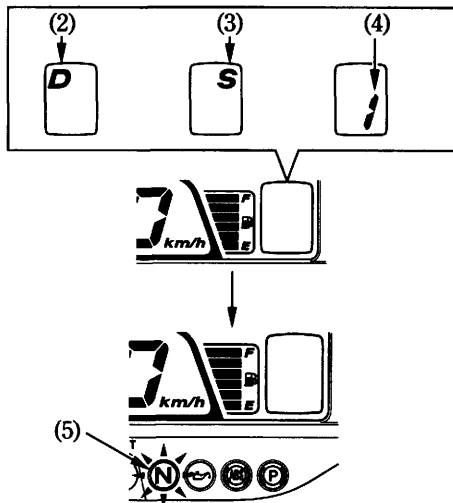

(2) D mode indicator
(3) S mode indicator

(4) Shift indicator
(5) Neutral indicator