


Shifting Restriction:

If the travel-device will be damaged or there will be over revving of the engine while shifting, shifting can not be done.

- Operating the shift switch (+) or (-) once changes one gear. The sequential shifting cannot be done if the shift switch (+) or (-) is pressed and held. If changing gear continuously, take your finger off the shift switch (+) or (-) and then press the shift switch (+) or (-) again.
- If your speed becomes too slow in the 6-speed manual mode, it shifts down automatically.

If There Is a Failure In HFT

If switching D mode and S mode cannot be done in the automatic shift mode or shifting cannot be done in the 6-speed manual mode, “-” icon (1) flashes to indicate a failure in HFT. See your Honda dealer as soon as possible.

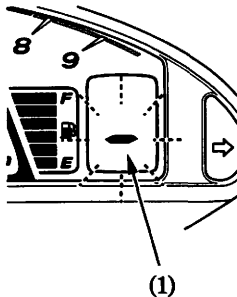

(1) “-” icon