

## RIGHT SIDE COVER

The right side cover must be removed to check the engine oil level and change the engine oil, engine oil filter and HFT oil filter.


Immediately after stopping the engine, the engine, exhaust pipe and muffler are too hot. Be careful not to burn yourself.

### Removal:

1. By pulling the right side cover (1) toward you with the notch (2), pull out the upper prongs (3) from the upper grommets (4).
2. By pulling up the right side cover, pull out the lower prong (5) from the lower grommet (6).

### Installation:

1. Align the lower prong with the lower grommet.
2. Align the upper prongs with the upper grommets
3. Push the prongs in.

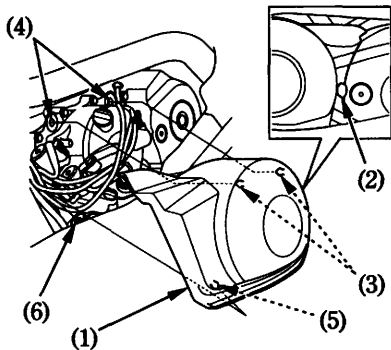

- |                      |                    |
|----------------------|--------------------|
| (1) Right side cover | (4) Upper grommets |
| (2) Notch            | (5) Lower prong    |
| (3) Upper prongs     | (6) Lower grommet  |