


## **Riding with HFT Automatic Shift Mode**

In this mode you can shift automatically depending on the throttle opening and the vehicle speed. Within automatic shift mode D mode and S mode can be selected.

Operate the shift switch (1) on the left handlebar control to change D mode and S mode depending on riding circumstances.

When going up hill, switch to S mode to enable more powerful riding depending on inclination of the rise.

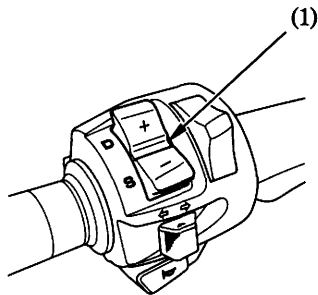

(1) Shift switch