


11. Apply a thin coat of engine oil to the new engine oil filter rubber seal (11).
12. Using a special tool and a torque wrench, install the new engine oil filter and tighten to a torque of:
26 N·m (2.7 kgf·m , 19 lbf·ft)

Use only the Honda genuine oil filter or a filter of equivalent quality specified for your model. Using the wrong Honda filter or a non-Honda filter which is not of equivalent quality may cause engine damage.

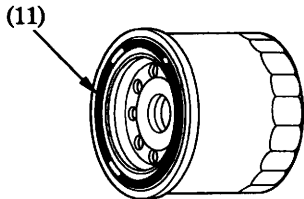

(11) Engine oil filter rubber seal

13. Check that the sealing washer on the drain bolt is in good condition and install the bolt. Replace the sealing washer every other time the oil is changed, or each time if necessary.
Oil drain bolt torque:
25 N·m (2.5 kgf·m , 18 lbf·ft)
14. Fill the crankcase with the recommended grade oil; approximately:
3.3 ℓ (3.5 US qt , 2.9 Imp qt)
15. Install the oil filler cap.
16. Start the engine and let it idle for 3–5 minutes.
17. 2–3 minutes after stopping the engine, check that the oil level is at the upper level mark on the dipstick with the motorcycle upright on firm, level ground. Make sure there are no oil leaks.
18. Install the right under cowl (page 83).
19. Install the right side cover (page 76).