


## Rear Turn Signal Bulb

The right and left turn signal bulb replacement can be done in the same way.

1. Remove the rear seat (page 71 ).
2. Remove the screws (1) and pull the grab rail cover (2) upwards.
3. Turn the socket (3) counterclockwise, then pull it out.
4. Pull out the bulb (4) without turning.
5. Install a new bulb in the reverse order of removal.
  - Use only the amber bulb.

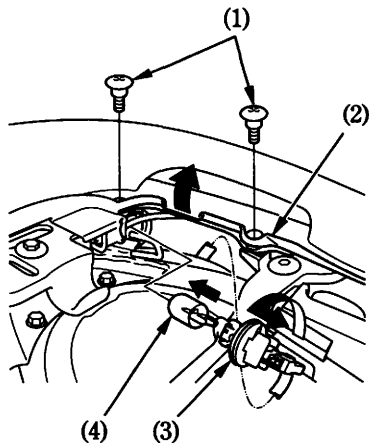

(1) Screws  
(2) Grab rail cover

(3) Socket  
(4) Bulb