

WHEEL REMOVAL


(Refer to the maintenance precaution on page 58)

Front Wheel Removal

1. Support the motorcycle with the maintenance stand (page 59).
2. Raise the front wheel off the ground by hoisting the top bridge.
3. Remove the speedometer cable (1) by removing screw (2).
4. Remove the axle nut (3).
5. Remove the axle shaft (4) and the wheel.

NOTE :

- Do not depress the brake lever when the wheel is off the motorcycle. The caliper pistons will be forced out of the cylinders with subsequent loss of the brake fluid. If this occurs, servicing of the brake system will be necessary. See your authorized Honda dealer for this service.

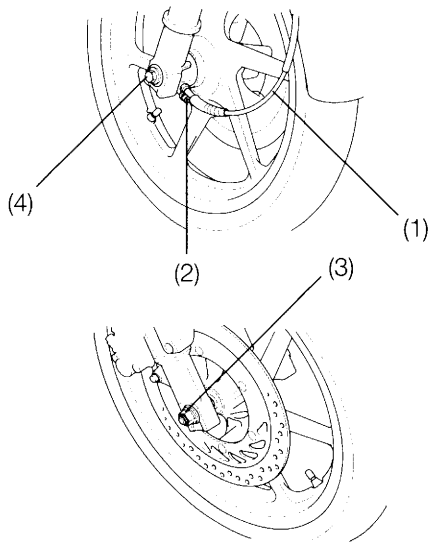

- (1) Speedometer cable (3) Axle nut
(2) Screw (4) Axle shaft