


Shifting Restriction:

If the system determines that the travel-device will be damaged or there will be over revving of the engine while shifting, the shift indicator (1) flashes and shifting can not be done.

- Operating the shift switch (+) or (-) once changes one gear. The sequential shifting cannot be done if the shift switch (+) or (-) is pressed and held. If changing gear continuously, take your finger off the shift switch (+) or (-) and then press the shift switch (+) or (-) again.
- If your speed becomes too slow in the 6-speed manual mode, it shifts down automatically.

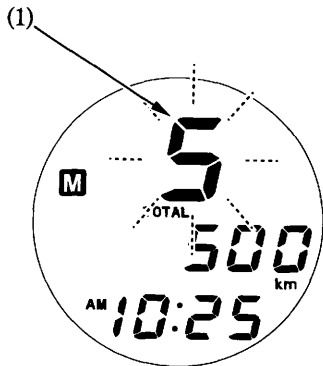

(1) Shift indicator