


Digital Clock


Shows hour and minute. To adjust the time, proceed as follows:

1. Turn the ignition switch ON.
2. Press and hold both the MODE button (2) and RESET button (3) for more than 2 seconds. The clock will be set in the adjust mode with the hour display flashing.

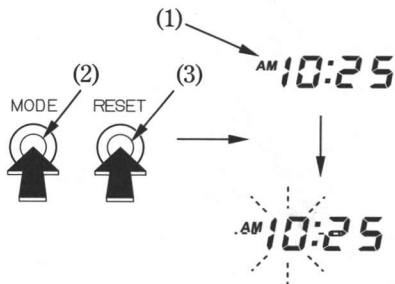

3. To set the hour, press the RESET button until the desired hour and AM/PM are displayed.

- The time is advanced by one hour, each time the button is pushed.
- Quick setting – press and hold the RESET button until the desired hour appears.

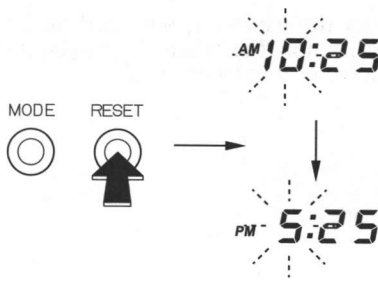

- (1) Digital clock
- (2) MODE button
- (3) RESET button