


To unlock the front seat lock and the left console box lock:

1. Open the right console box (1) (page 107).
2. Insert the mechanical key (2) into the key cylinder (3) and turn it clockwise. The front seat lock and the left console box will unlock at the same time.

Make sure the front seat lock and left console box are securely locked before riding.

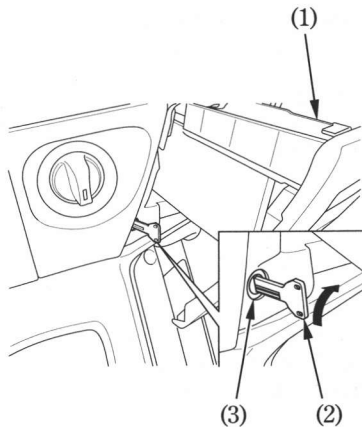

- (1) Right console box
- (2) Mechanical key
- (3) Key cylinder